

Replacement Part Instructions

How to Replace a 60 Minute Timer

Tools Needed:



Phillips Screwdriver





220 W. Jackson St, Morton, IL 61550 1-800-536-9495 or info@ironaway.com

1. Disconnect power



Disconnect power to unit by shutting off electricity at service entrance (electrical breaker box) before beginning service to unit.

2. Remove timer knob



Using a flathead screwdriver, gently pry off the timer knob and lay off to the side.

3. Unscrew electrical raceway



Begin removing electrical raceway from unit by removing small screws at the top and bottom of raceway with a flathead screwdriver. Gently pull raceway out of unit, being careful of wires that are still connected.

4. Remove screws on printed timer face




Using a Phillips screwdriver, remove the two screws on the sides of the timer face (where the knob was).

5. Remove old timer




Turn the raceway over so the back is exposed. Lift out the timer and remove the flag shaped connectors from marked terminal 1, and then from marked terminal 3.

6. Remove old timer wire

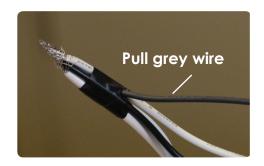

Unscrew the wire nut on bundle of white wires by twisting nut counterclockwise. Locate the dark grey wire that connects to timer and remove from bundle by gently pulling it.

7. Connect new timer

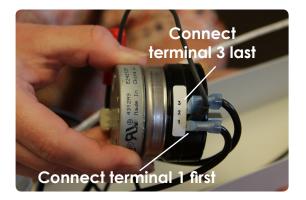

Connect raceway wires to new timer by first connecting long black wire to terminal marked 1. Then connect the shorter wire to terminal marked 3.

8. Connect new wire



Locate dark grey wire at back of timer and lay it flush with striped ends of white wire bundle. Replace wire nut by screwing clockwise with downward pressure. **Note: make sure wires are snug and cap is secured tightly.**

9. Install timer



Place shaft of new timer through hole in raceway with the three terminals on top pointing towards back of spotlight.

11. Re-install electrical raceway



Return raceway to unit, screwing top and bottom screws to hold in place.

10. Replace face screws & timer knob



Turn raceway over and screw the two face screws on timer face with Phillips screwdriver. You may need to align screwholes before inserting screws. Replace timer knob on new timer by gently pushing onto shaft of timer.

12. Restore power

Restore power to unit at electric service entrance (breaker box).

Got questions? Give us a call at 1-800-536-9495

FORM 2221 02/17



220 W. Jackson St Morton, IL 61550 1-800-536-9495 info@ironaway.com