



**Iron-A-Way**  
*Managing space with style*

## How to Replace a Cover & Pad on a Non-Swivel board

### Tools Needed:



Scissors



220 W. Jackson St, Morton, IL 61550  
1-800-536-9495 or [info@ironaway.com](mailto:info@ironaway.com)

Before beginning these instructions, examine how your cover and pad is currently installed. This will be aid in better installation of your replacement cover and pad.

**Note:** For ease of installation, have a partner help you with these steps.

### 1. Remove old cover/pad



With board in upright position, cut strings on both sides of board back. Lower board to ironing position, then remove old cover & pad.

### 2. Lay new pad on board



With board lowered, place the new pad on board, extending the edges slightly over the tapered end of board.

### 3. Lay new cover on board



Place the new cover on top of the pad and extend the edges approximately 1 1/2" over new pad.

## 4. Pull drawstrings



Placing your hand on the nose of the board, pull one drawstring at a time to partially secure cover/pad.

## 42" Boards Only:




If you have a 42" board, fold approximately 6" of the excess cover underneath the pad. Then raise the board back to upright position.

## 5. Thread drawstring



With board in upright position, thread the ends of the drawstring starting from the inside of the pad and cover. Pull through each eyelet as described below by board size.

**42" Boards: Use middle eyelets**  
**46" Boards: Use bottom eyelets**

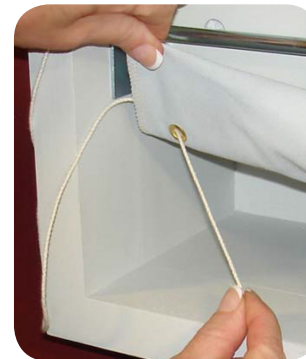

Thread drawstring through eyelet found on outside edge of the cover, going from the inside to the outside.


**Complete this step for both sides.**

## 6. Tighten drawstrings



While firmly holding your hand over the nose of the board, keeping the cover/ pad in one place, tighten one drawstring at a time, pulling snug.

## 7. Loop the ends

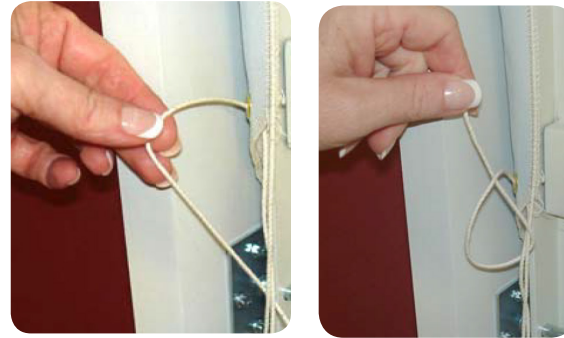

Bring the string underneath, creating a loop, and then place end through loop. Pull tight to finish knot.

**Complete this step for both sides.**

## 8. Cut excess string



Lastly, cut excess string from each side.

**Got questions?  
Give us a call at  
1-800-536-9495**

FORM 2235 02/17



220 W. Jackson St  
Morton, IL 61550  
1-800-536-9495  
info@ironaway.com